





Adding videos to your video book

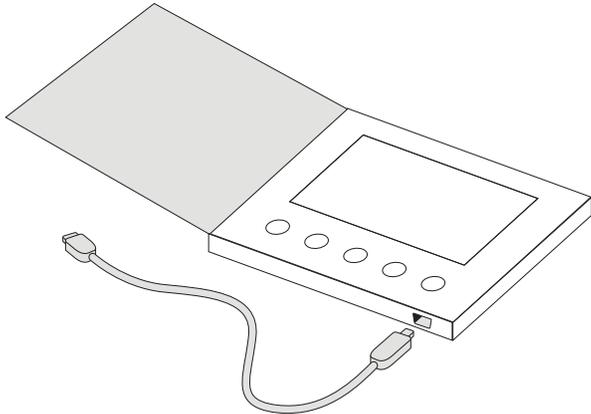


1 Connecting

Take supplied USB cord and connect one end to the video book and the other end to your computers USB port.

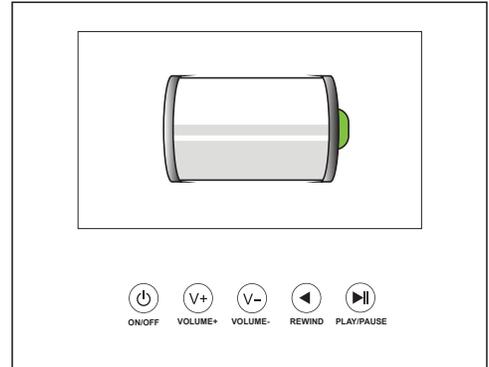


2 Charging

Once plugged in a battery graphic should appear. While it is charging the battery graphic will blink. A full charge will last 2-3 months with no playing and 2 hours with continuous play.

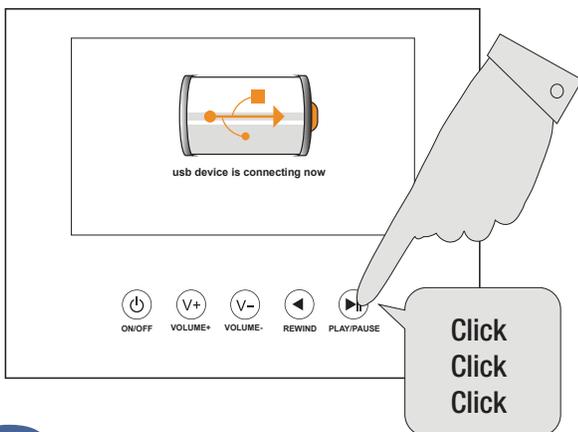

3 Unlocking

To unlock the video book press the "PLAY / PAUSE" button 3-4 times. When it is unlocked, a USB symbol will appear on the screen. You are now ready to add videos to your video book. Now that the video book is unlocked your computer will show the USB drive icon on your desktop.

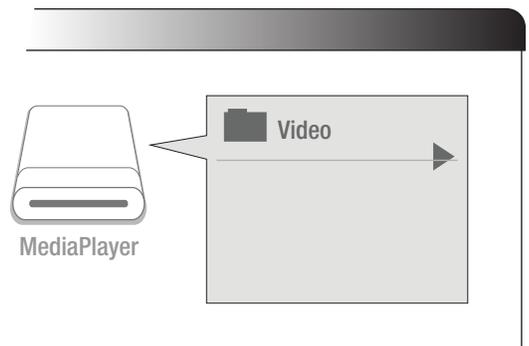

4 Copying

Click on the drive icon to display the contents. There should be a folder titled "Video". You must save your video inside this folder. Do not rename this folder or the drive. Once you are done copying media into the video folder make sure to eject your video book from your computer first, then unplug it.

Tips and Testing

Tips
Adding multiple videos: You can add multiple videos inside the "Video" folder. It will play the media in A-Z order. To change the order simply change the name of your images / videos. Example: 01.mp4, 02.mp4 03.mp4 04.mp4

Trouble shooting:

Q: When I plug in the video it does not display on my computer.

A: Try clicking the "PLAY / PAUSE" button 3-4 times. Ensure you are not pressing the button code to fast. If it still does not load please try a different computer as some operating systems may not work. Your video book is both MAC and PC compatible.

Q: I saved the video but when I unplugged it, it did not play.

A: Please confirm you saved the video inside the video folder. Also please confirm the video is either an AVI or MP4 format.